
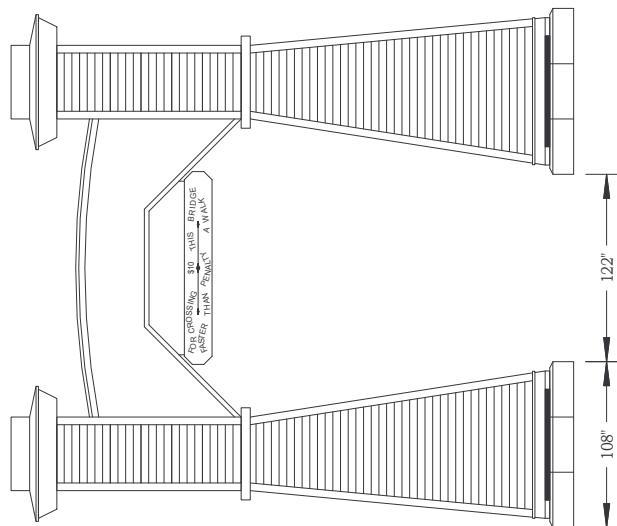


Plan View of Footings

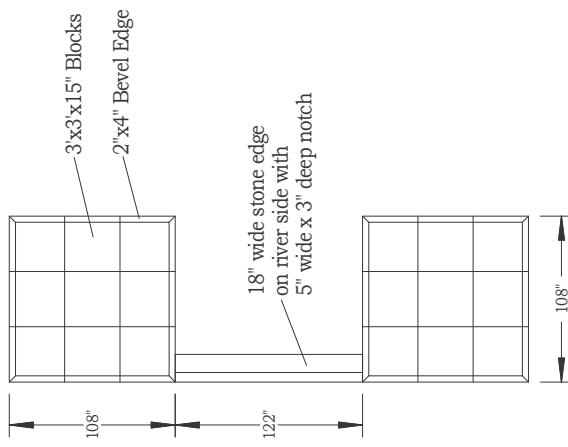

Span Scale:

Fulsom Landing Bridge
Riverside, NY / built in 1871, 30

Folsom Landing Bridge
Riverside, NY / built in 1871, 300' Span

based on field measurements of footings & photos
by Jon Patton 11/07